 


libro electrónico fnac Touch Little

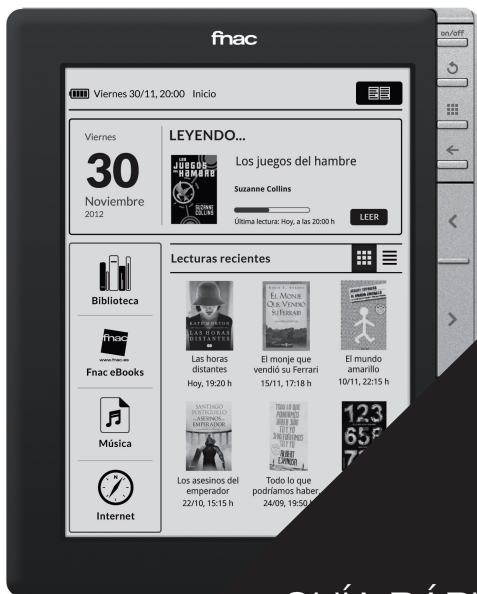

GUÍA RÁPIDA
QUICK START GUIDE

ESPAÑOL

Libro Electrónico Fnac Touch Little

Gracias por elegir el Libro Electrónico Fnac Touch Little. Antes de usar su lector, lea detenidamente esta guía rápida.

Contenido del paquete

Antes de usar su lector por primera vez, por favor compruebe el contenido del paquete. Si alguno de los siguientes elementos no está en el paquete, diríjase al distribuidor donde adquirió su dispositivo.

- Libro Electrónico Fnac Touch Little
- Cable conexión a ordenador
- Documentación

INDICACIONES

- Para garantizar un uso correcto, lea atentamente esta guía rápida antes de usar el dispositivo.
- Las instrucciones se basan en las configuraciones de fábrica del dispositivo.
- Es posible que las imágenes y capturas de pantalla de esta guía no coincidan exactamente con las del producto final.
- Es posible que existan partes del contenido que no coincidan exactamente con el funcionamiento del producto debido a actualizaciones en el firmware del dispositivo. Para obtener la versión más actualizada del manual de usuario visite www.fnac.es.
- Fnac no es responsable de los problemas de rendimiento ni de las incompatibilidades provocadas por la modificación de parámetros de registro por parte del usuario.
- Parte del contenido y de los servicios a los que se obtiene acceso mediante este dispositivo pertenecen a terceros y están protegidos por derechos de autor, patente, marca registrada y/u otras leyes de propiedad intelectual. Fnac no garantiza el contenido ni los servicios proporcionados.

Iconos instructivos



Aviso: Consejos y notificaciones importantes sobre el uso de su dispositivo.

- > **A continuación:** Orden de opciones o menús para llevar a cabo un paso.

Marcas comerciales

FNAC es una marca registrada explotada en España bajo licencia de FNAC S.A.

Wi-Fi®, el logotipo de Wi-Fi CERTIFIED y el logotipo de Wi-Fi son marcas comerciales registradas de Wi-Fi Alliance.

El resto de marcas comerciales y los derechos de autor son propiedad de sus respectivos dueños.

 
“SM Diccionario Clave” © 2006 Ediciones SM,
Tecnología Dixio - © 2011 Semantix.

“Wordnet” © 2005 Princeton University, Powered by
Dixio - © 2011 Semantix.

“Semantix Simple English Words y Spanish-English
Dictionary by Semantix”, Powered by Dixio - © 2010
Semantix.

“Diccionario Inglés-Español de Semantix”, Tecnología
Dixio - © 2011 Semantix.

Vistas generales del dispositivo

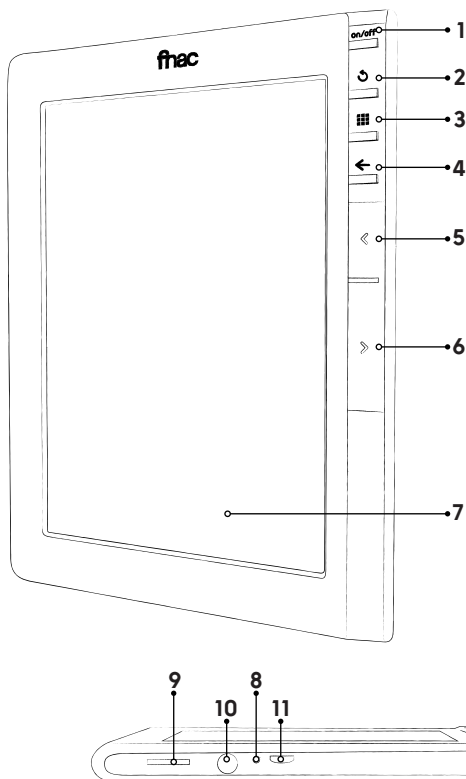



Botones y conexiones

1. Botón Encendido

on/off

Pulsa el botón de encendido durante unos segundos hasta que el dispositivo se encienda.

Para apagarlo, pulsa el mismo botón y después el siguiente icono .

Para entrar en modo reposo, pulsa el botón de encendido y presiona el icono .

Pulsa el botón nuevamente para reanudar la lectura.

2. Botón de refresco

Recarga la página actual de lectura con el fin de borrar de la pantalla posibles restos de otras páginas en lecturas prolongadas.

3. Botón menú

Muestra el menú principal de opciones.

4. Botón atrás

Vuelve al menú anterior dentro de cada aplicación o al inicio si estás al comienzo de una aplicación.


5. Botón anterior

 
Vuelve a la página anterior en modo lectura y en listado.

- 6. Botón siguiente ➤** Va a la página siguiente en modo lectura y en listados.
- 7. Pantalla táctil** La pantalla táctil capacitiva permite realizar acciones tocando directamente sobre ella.
- 8. Indicador luminoso** Se enciende al conectar el dispositivo a un ordenador o a una fuente de alimentación para cargar el lector.
- 9. Ranura Micro-SD** Inserta una tarjeta Micro-SD/SDHC en la ranura para acceder a los archivos almacenados en ella.
- 10. Jack para auriculares** Introduce tus auriculares para escuchar música o audiolibros a través de ellos.
- 11. Puerto micro-USB** Permite conectar su dispositivo al ordenador para transferir archivos desde éste al lector y viceversa. A través del cable USB también puedes cargar el dispositivo.

PANTALLA TÁCTIL

Toca la superficie de la pantalla táctil para interactuar con el dispositivo (seleccionar un menú, un elemento, pasar página, tomar notas, etc.).

Pulsa el icono  para acceder rápidamente al libro que estás leyendo o a la biblioteca en caso de no tener abierto ninguna lectura.

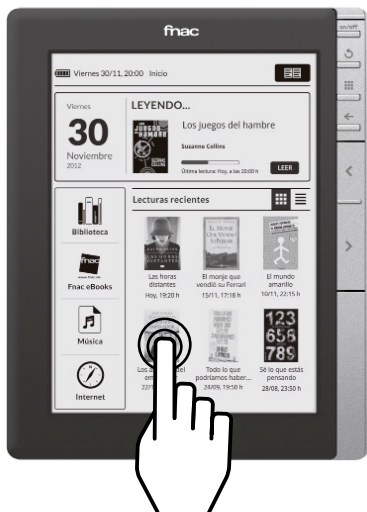

PASAR PÁGINA

En el modo de “Lectura”, toca sobre el tercio derecho de la pantalla para pasar página. Para regresar a la página anterior toca sobre el tercio izquierdo de la pantalla.

Regresar a la
página anterior

For a minute or two she stood looking at the house, and wondering what to do next, when suddenly a footman in livery came running out of the wood—(she considered him to be a footman because he was in livery: otherwise, judging by his face only, she would have called him a fish)—and rapped loudly at the door with his knuckles. It was opened by another footman in livery, with a round face, and large eyes like a frog; and both footmen, Alice noticed, had powdered hair that curled all over their heads. She felt very curious to know what it was all about, and crept a little way out of the wood to listen.

The Fish-Footman began by producing from under his arm a great letter, nearly as large as himself, and this he handed over to the other, saying, in a solemn tone, 'For the Duchess. An invitation from the Queen to play croquet.' The Frog-Footman repeated, in the same solemn tone, only changing the order of the words a little, 'From the Queen. An invitation for the Duchess to play croquet.'

Then they both bowed low, and their curls got entangled together.

Alice laughed so much at this, that she had to run back into the wood for fear of their hearing her; and when she next peeped out the Fish-Footman was gone, and the other was sitting on the ground near the door, staring stupidly up into the sky.

 
Alice went timidly up to the door, and knocked.

Pag. 250 de 348

Pasar a la página
siguiente

MENÚ PRINCIPAL

Pulsa el icono de Menú  para acceder al menú principal.

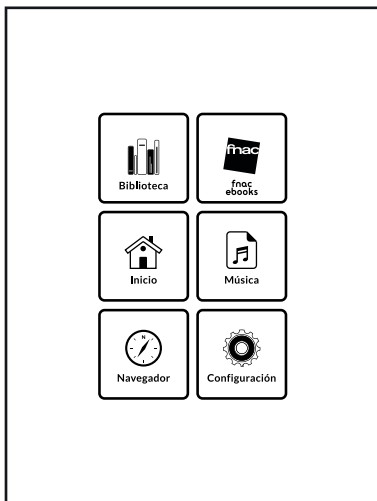



Regresa a la pantalla de inicio desde cualquier pantalla.



Accede a la biblioteca.



Accede a la tienda de libros de Fnac.



Accede a tus archivos de música.



Accede al navegador web para poder consultar páginas de internet.



Accede al menú de ajustes de tu lector desde el que podrás configurar tu conexión a internet, el idioma de los menús, el diccionario por defecto, obtener información de tu lector o actualizar el software.

CÓMO LEER UN LIBRO ELECTRÓNICO

Para leer un libro, accede a la Biblioteca pulsando 

A continuación, pulsa sobre el título o la carátula del documento.

El libro se abrirá en la primera página o, dependiendo del formato, por la página en la que has dejado la lectura si ya has abierto el libro con anterioridad.

Para pasar página, pulsa el botón “Anterior” o “Siguiente” o toca directamente sobre la pantalla. Cuando termines de leer el libro, pulsa el botón “Menú” para regresar a la Biblioteca.

Durante la lectura, toca brevemente sobre el centro de la pantalla para acceder al menú de lectura.



Accede al índice, notas, resaltados y marcadores creados del libro que está abierto.



Te permite buscar palabras en el libro que estás leyendo.




Va directamente al número de página seleccionado.






Te permite cambiar el tamaño y el tipo de fuente.



Accede a la información del libro que estás leyendo.

 Lu 28/11, 18:30

The Adventures of Alice





what to do next, when suddenly a footman in livery came running out of the wood—(she considered him to be a footman because he was in livery: otherwise, judging by his face only, she would have called him a fish)—and rapped loudly at the door with his knuckles. It was opened by another footman in livery, with a round face, and large eyes like a frog; and both footmen, Alice noticed, had powdered hair that curled all over their heads. She felt very curious to know what it was all about, and crept a little way out of the wood to listen.


The Fish-Footman began by producing from under his arm a great letter, nearly as large as himself, and this he handed over to the other, saying, in a solemn tone, 'For the Duchess. An invitation from the Queen to play croquet.' The Frog-Footman repeated, in the same solemn tone, only changing the order of the words a little, 'From the Queen. An invitation for the Duchess to play croquet.'


Then they both bowed low, and their curls got entangled together.


Alice laughed so much at this, that she had to run back into the wood for fear of their hearing her; and when she next peeped out the Fish-Footman was gone, and the other was sitting on the ground near the door, staring stupidly up into the sky.


CONTENIDO


BUSCAR


IR A PÁGINA


APARENCIA


RESUMEN

Durante la lectura, pulsa de forma prolongada sobre una palabra para acceder al menú contextual de lectura. Desde este menú, podrás:

No había nada que hacer. Aquel día, para crear un momento no romántico, no ideal, ~~no perfecto, como mínimo le tendría que~~

AÑADIR NOTA

BUSCAR

RESALTAR

camarera
s.f.
1. f. Persona que sirve en los hoteles, bares, cafeterías u otros establecimientos análogos, y también en los barcos de pasajeros.
2. f. Mujer de más respeto entre las que sirven en las casas principales.
3. f. En las cofradías o hermandades religiosas, mujer que tiene a su cargo cuidar el altar y las imágenes.

VER DEFINICIÓN COMPLETA

nos acompañó una **camarera** muy amable, el fuego crepitaba en una chimenea de rincón, mientras que desde la ventana se disfrutaba de una espléndida vista de los canales.

—Este sitio es mágico —dijo Alice.

Pág.11-12 de 24

Añadir nota: Permite añadir nuevas notas en el libro que está leyendo. Si selecciona Añadir nota aparecerá el teclado virtual para que introduzca el texto que desee.

Una vez guardada la nota, el texto sobre el que se creó la nota se mantendrá resaltado, y le permitirá editar o eliminar la nota si pulsa sobre él.

Buscar: Busca la palabra seleccionada en el libro que está leyendo.

Resaltar: Subraya una palabra o un párrafo. Para seleccionar más de una palabra, pulse de forma prolongada sobre la primera palabra del texto que quiere resaltar y arrastre hasta el final del párrafo.

Ver definición completa: Le permite consultar la definición o traducción de una palabra según el diccionario por defecto que tenga seleccionado.

ENGLISH

eReader FNAC Touch Little

Thank you for choosing eReader FNAC Touch Little. Before using your eReader, carefully read this quick-start guide.

Box contents

Before using your device for the first time, please check the content of the package. If any of the following items is not in the package, contact the retailer where you purchased the device.

- eReader FNAC Touch Little
- microUSB-USB cable
- Documentation

INSTRUCTIONS

- To properly use the device, carefully read this quick-start guide before using it.
- Instructions are based on factory settings of the device.
- Images and screenshots in this guide may not exactly match those of the final product.
- Parts of the content may not exactly match the operation of the product owing to firmware updates of the device. For the latest version of the user manual, visit www.bqreaders.com.
- FNAC is not liable for any performance problems or incompatibilities caused by the user's editing of the registry.
- Part of the content and services accessed through this device belong to third parties and are protected by copyright, patent, registered trademark and/or other intellectual property laws. FNAC does not guarantee the content or the services provided.

Instructional icons



Alert: Important tips and notifications about how to use your new device.

> **Next:** Indicates the next step in a sequence.

Trademarks

FNAC is a registered brand under the license of FNAC S.A.

Wi-Fi®, Wi-Fi CERTIFIED and Wi-Fi logos are registered trademarks of Wi-Fi Alliance.

Other trademarks and their copyrights are property of their respective owners.

 
 
“SM Clave Dictionary” © 2006 Ediciones SM, Powered by Dixio - © 2011 Semantix.

“Wordnet” © 2005 Princeton University, Powered by Dixio - © 2011 Semantix.

“Semantix Simple English Words and Spanish-English Dictionary by Semantix”, Powered by Dixio - © 2010 Semantix.

“English-Spanish Dictionary Semantix”, Powered by Dixio - © 2011 Semantix.


General views of the device

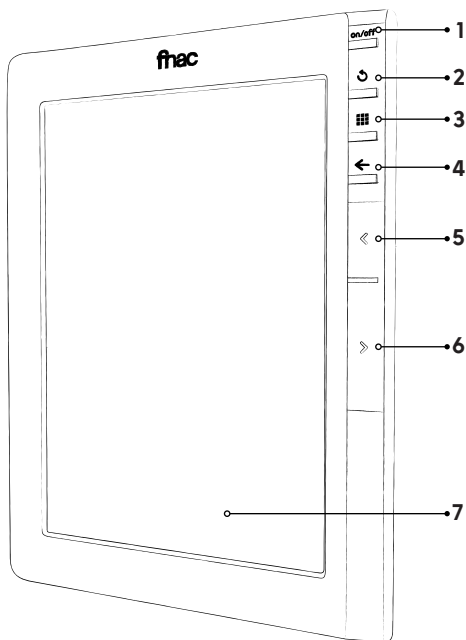


Buttons and ports

1. Power Button on/off

Press and hold down the power button for several seconds until the device switches on.

To switch it off, press and hold down the button and then press .

To activate the Sleep mode, press the Power button once and press . Press it again to resume reading.

2. Refresh Button

Reloads the current page reading to erase any traces of the display from other long readings pages.

3. Home Button

Displays the main menu options.

4. Back button

Takes you back to the previous screen or the home screen.

5. Previous button

Back to previous page.


6. Next button

Go to the next page.

- | | |
|------------------------------|---|
| 7. Touch screen | The touch screen to perform actions directly touching it. |
| 8. LED | LED turn on by connecting the device to a computer to a power source to charge the eReader |
| 9. Micro-SD slot card | Allows you to insert a micro-SD card and access the files stored on it. |
| 10. Jack | Connect here your headphone to listen to music or audio books. |
| 11. Micro-USB port | Allows you to connect your device to a computer in order to transfer files. You can also use the micro-USB cable to charge your device. |

TOUCH SCREEN

Touch the surface of the touch screen to interact with the device (select a menu, an item, move on, take notes, etc.)

Click the icon  for quick access to the book you are reading or library should not have opened any reading.



TURN THE PAGE

In reading mode, touch on the right third of the screen to turn the page. To return to the previous page touch on the left third of the screen.

Back to previous page

For a minute or two she stood looking at the house, and wondering what to do next, when suddenly a footman in livery came running out of the wood—(she considered him to be a footman because he was in livery: otherwise, judging by his face only, she would have called him a fish)—and rapped loudly at the door with his knuckles. It was opened by another footman in livery, with a round face, and large eyes like a frog; and both footmen, Alice noticed, had powdered hair that curled all over their heads. She felt very curious to know what it was all about, and crept a little way out of the wood to listen.

The Fish-Footman began by producing from under his arm a great letter, nearly as large as himself, and this he handed over to the other, saying, in a solemn tone, 'For the Duchess. An invitation from the Queen to play croquet.' The Frog-Footman repeated, in the same solemn tone, only changing the order of the words a little, 'From the Queen. An invitation for the Duchess to play croquet.'

Then they both bowed low, and their curls got entangled together.

Alice laughed so much at this, that she had to run back into the wood for fear of their hearing her; and when she next peeped out the Fish-Footman was gone, and the other was sitting on the ground near the door, staring stupidly up into the sky.

 
Alice went timidly up to the door, and knocked.

Pag. 250 de 348

Go to the next page

MAIN MENU

Tap the Menu icon  to access the main menu.

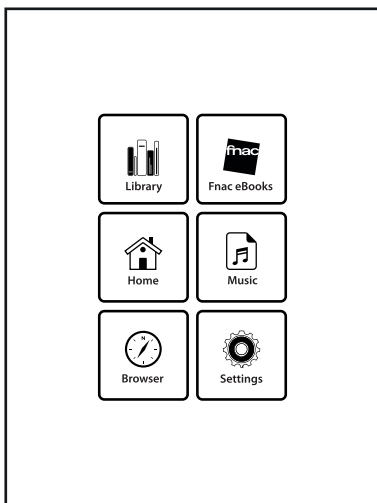



Return to the home screen from any screen.



Access to the library.



Go to Fnac eBooks store.



Access your music files.



Access the web browser to view web pages.



Access the settings menu of your desktop from which you can configure your Internet connection, the language of the menus, the default dictionary, obtain information from your desktop or updating software.

HOW TO READ AN EBOOK

To read a book, go to the Library by pressing the 

A continuación, pulsa sobre el título o la carátula del documento.

Next, press the name or spine of the book. It will open at the first page, or at the page you were last on if you've already started reading the eBook. To turn the page, press the right-hand side of the screen to go forward and the left-hand side to go back. When you've finished reading, press the menu button to go back to the Library.

Press the centre of the screen lightly when a book is open to access the reading menu, which will give you the following options:



Brings up the Contents: index, notes, highlights and bookmarks created the book you've opened.



Allows you to search for text in the book you're reading.




Go directly to the page number selected.




It allows you to change the size and font type.





Access information about the book you're reading.

 Lu 28/11, 18:30

The Adventures of Alice









what to do next, when suddenly a footman in livery came running out of the wood—(she considered him to be a footman because he was in livery: otherwise, judging by his face only, she would have called him a fish)—and rapped loudly at the door with his knuckles. It was opened by another footman in livery, with a round face, and large eyes like a frog; and both footmen, Alice noticed, had powdered hair that curled all over their heads. She felt very curious to know what it was all about, and crept a little way out of the wood to listen.


The Fish-Footman began by producing from under his arm a great letter, nearly as large as himself, and this he handed over to the other, saying, in a solemn tone, 'For the Duchess. An invitation from the Queen to play croquet.' The Frog-Footman repeated, in the same solemn tone, only changing the order of the words a little, 'From the Queen. An invitation for the Duchess to play croquet.'


Then they both bowed low, and their curls got entangled together.


Alice laughed so much at this, that she had to run back into the wood for fear of their hearing her; and when she next peeped out the Fish-Footman was gone, and the other was sitting on the ground near the door, staring stupidly up into the sky.


CONTENTS

 

SEARCH


GO TO PAGE


APPEARANCE


SUMMARY

When a eBook is open, long-press on a word to access the context menu for reading. From here, you can:

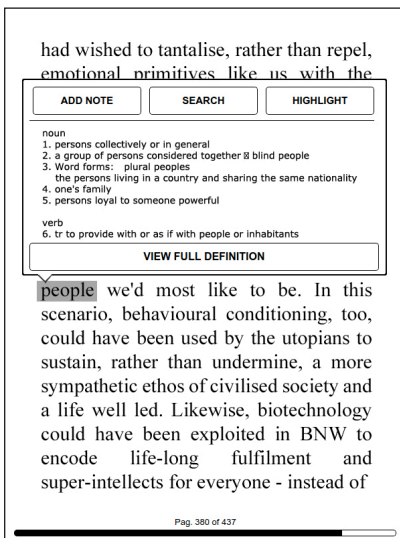

Add a note: this option allows you to add new notes to the book you're reading. Select Add note to bring up a virtual keyboard you can use to write your note. Once you've saved the note, the text you long-pressed on to create the note will remain highlighted and you can edit or delete the note click on it again.

Search: Search the selected word in the ebook you are reading.

Highlight: this option underlines a word or sentence. To select more than one word, long-press on the first word of the text you wish to highlight and drag your finger to the end of the desired section.

See full definition: this option allows you to check the definition or translation of a word using the dictionary you have set as the default.



www.fnac.es